

JEEP JL WRANGLER 4 DOOR – WITH SUB WOOFER

ROLLER DRAWER INSTALLATION TO ADR 34/02 RDRF790 Series: Vehicle specific instruction and drawing Side Floor Kit- JL4DFKIKSUB

NOTE:

- Do not elongate any holes
- Read and understand all instructions before proceeding

Throughout these instructions rear refers to rear of vehicle front refers to front of vehicle.

INSTRUCTIONS ARE AVAILIABLE FROM ARB STOCKISTS.

SECTION 1:- FRAME PREPERATION.....General Instructions- Supplied In Drawer Module

SECTION 2:- VEHICLE SPECIFIC INSTALLATION.....This Instruction

SECTION 3:- REASSEMBLY.....General Instructions- Supplied In Drawer Module

2) VEHICLE SPECIFIC INSTALLATION:


– Ensure you have completed General Instructions Section One – Frame preparation and removed the drawer before following this vehicle specific instruction.

The General instructions are supplied with the Outback Solutions Drawer Modules and are also available from your ARB stockist.

2.01/- Remove the rear floor carpeted panel, 6 tie down points and 2 side trims to expose the 6 x M8 threaded holes in the floor.



2.02/- Remove the 2 mounting brackets from the installation kit. Identify left and right brackets. Left hand is shown opposite.
Install the mounting brackets onto the base of the drawer cabinet. The semi-circular cut out on the bracket is designed to give clearance around the side bearing retaining bolt.

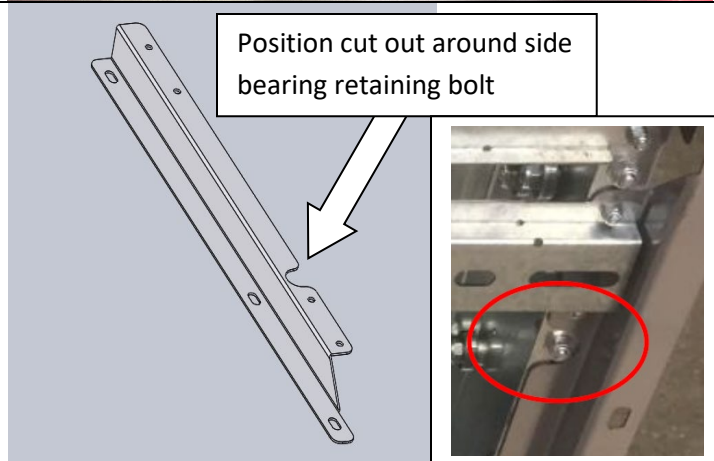

Vehicle Specific Instructions

2.03/- Attach the mounting brackets to the under-side of the drawer cabinet. The brackets are to be inserted between the drawer cabinet and the mounting hats.

Leave these bolts loose until the drawer is positioned in the vehicle.



2.04/- Prepare sill rail support spacer. Clip and knock together plastic spacers to form a stack 15mm tall. Remove pins from last of these spacers. Spacer thickness is marked on Individual spacers



2.05/- Install the spacer under the sill panel below the drawer latch.

Remove the hinged plastic trim from the front lower edge of the drawer to allow easier access to the jack cover.



2.06/- Place drawers in rear of vehicle. Align 6 holes the drawer mounting brackets with the 6 holes in the vehicles floor. Using the 6 x M8 x 25mm bolts with spring washers and flat washers, secure the mounting brackets to the vehicle. Tighten the 8 x M6 bolts securing the mounting brackets to the drawers.





Vehicle Specific Instructions



2.07/- Side Fill Panel fastening:
Fasten Side Fill Panel to outside of bearing channel using three (3) 6mm x 20mm black round head set screws.

First fasten through top hole in plastic fascia panel into captive nut in Side Fill Panel.
Second, fasten through holes in outside bearing channel located top and bottom of front bearings.

PUSH CARPET FORWARD TO COVER EXPOSED FLOOR

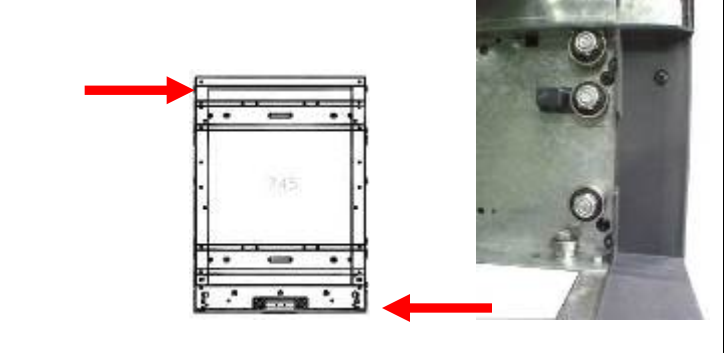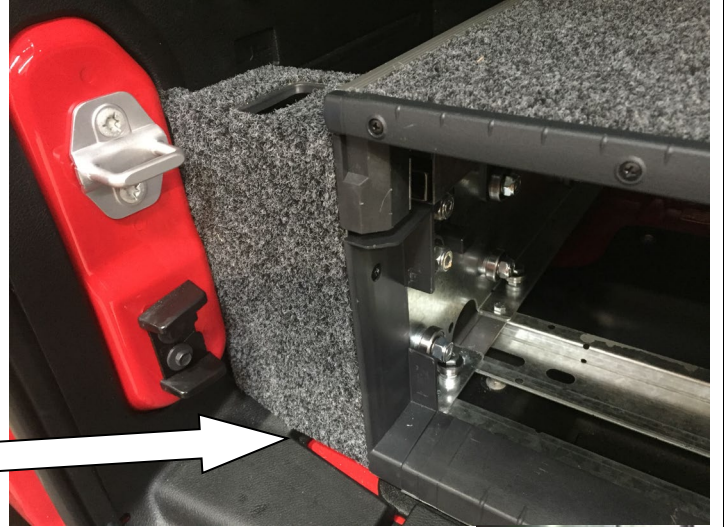


2.08/- Fit left "L" support brackets to the left corner of the drawer assembly. Fasten with 3X M6 hex head bolts from inside the drawer assembly. Ensure slots for floor cleats face the rear of the vehicle.

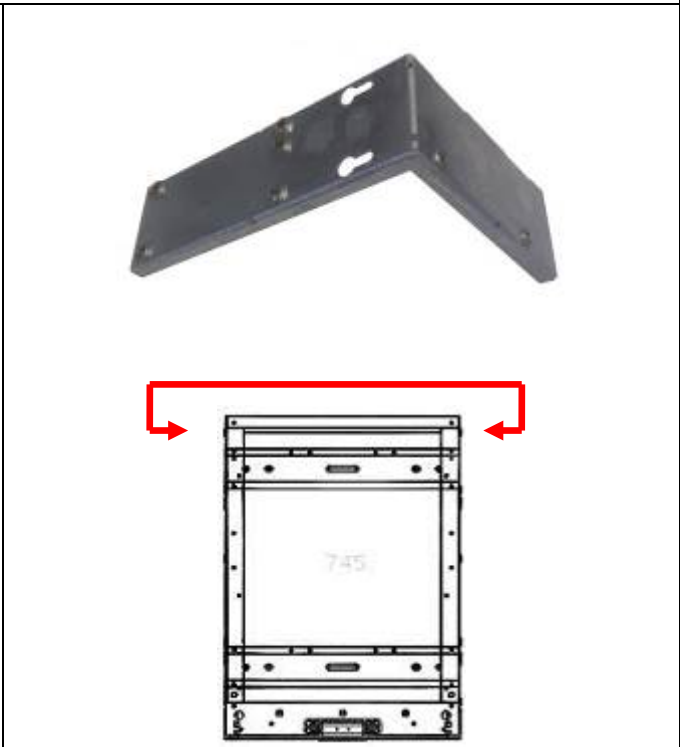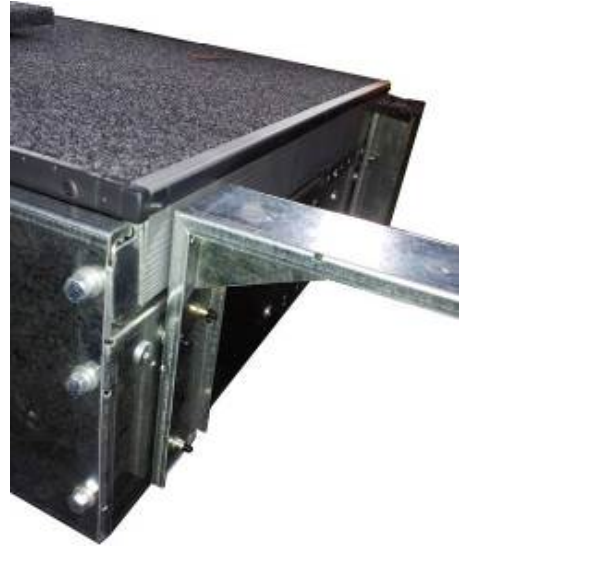

Vehicle Specific Instructions

2.09/-Fit side floor.

The front cleats on the underside of the floor will engage in slots in the "L" support brackets.

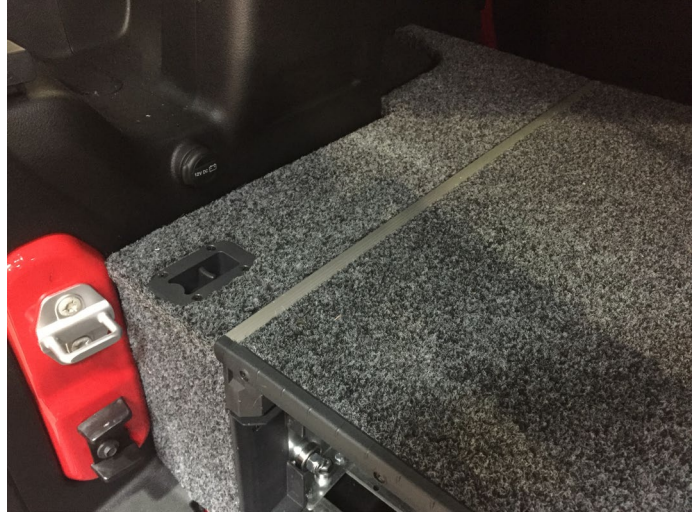

2.10/- Fasten the panel marked CECC JLSUB using the (4) 6mm x 20mm black round head set screws to the exterior of drawer on side that has subwoofer mounted to vehicle. This panel will provide a carpet finish to the exterior of the installed drawer.

2.11/-/- Return to General instructions section 3 to complete the installation and refit the drawer. The General instructions are supplied with the Outback Solutions Drawer Modules and are also available from your ARB stockist.

If for any reason you wish to cover the exposed front metal section behind rear seats, please purchase part No#: CKIT from your nearest ARB dealer and use adhesive to attach spare carpet kit.